

PRELIMINARY SETUP & ADJUSTMENTS



THREADING FILM ON POWERED FILM UNWIND

- Adjust the film inverter (1) to the height necessary for your package by turning the knob with one hand and lowering the top bracket (2) with the other hand.
- Place centerfold film on the film cradle between the rollers (3) with the open, leading edges of the film to the right side of the cradle (4) with the open edge feeding over top of the roll down towards the dancer bar (5).
- The threading diagram (6) shows the proper way to thread the film across the rollers and dancer bar and up to the perforating rollers.
- To feed the film into the film inverter, pull a couple feet of film through the unwind and separate the two edges of the film and feed one edge over the top inverter plate (2) and feed the other edge under the bottom edge (7) between the top of the bottom edges and underneath the product tray.
- Then pull both edges of the film towards the sealing area (8) meanwhile smoothing the film out on the edge of the inverter plates (2).
- Once this is done, seal the open edges of the film (9) and place your package on the tray ready to be sealed.

